



FINISHING TOUCHES

TUFFCORE WPC/SPC TRANSITIONS


The purpose of transitions is to complete the look of a flooring project by covering edges and gaps, hiding joints left for expansion and contraction, and bridging areas where one floor covering ends and another one begins.



1 1/16"


5/8"


52WTM T-MOLDING

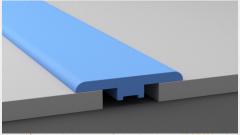


3/16" 3/6" 3/6"

53WRD REDUCER

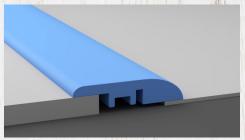




54WSQN END CAP

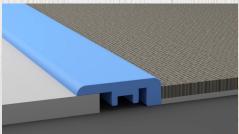


3/16" 7/16"


55WSTN FLUSH STAIR NOSE





55WOLSTN (SPC ONLY) OVERLAP STAIR NOSE

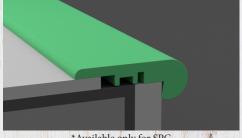



For the most accurate and up-to-date information, please check out our online version at www.my-nfp.com.